


Assembly Instruction

1

Remove protective covering from screen. Then install faceplate and bracket together with screen in between. Use #10-32 x 1 1/8" or #10-32 x 3/8" panhead thread-cutting screws for the fabric or acrylic model, respectively. See acrylic example in Figure A.

Note: Level mounting surface prior to installing screen

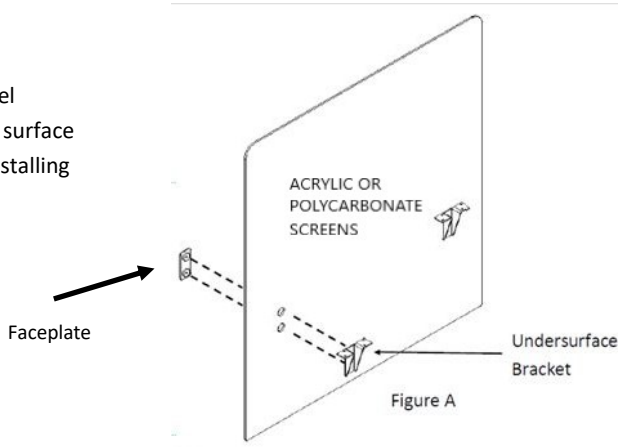

Note: Privacy screens should not be used to create a continuous screen by placing multiple models end to end. Tolerances and deflections found in the unsupported panel will result in misalignment along the top of the adjacent panels and will not meet customer's visual expectations.

2

After brackets are attached to screen, butt screen and top of undersurface bracket to edge of surface. Then use (4) #8 x 1" woodscrews per undersurface bracket to secure screen assembly to worksurface. Installation requires at least two people, and brackets should be installed starting from either end of the screen assembly. It is critical that the screen is straight (perpendicular to worksurface) during the installation of the first undersurface bracket to the worksurface.

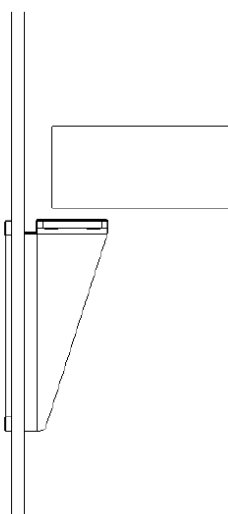


Figure B

Note: 72" to 42" long screens have 3 bracket assemblies. 36" to 21" have 2.

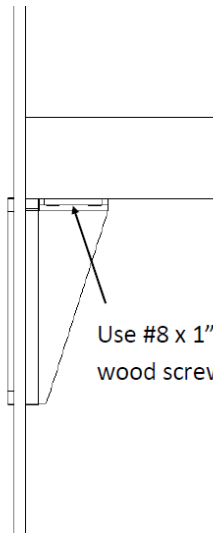


Figure C

Accessory Edgemount Screens

Package Contents

Hardware.....	Qty
#8 x 1" panhead woodscrews	8 to 12
#10-32 panhead thread cutting screws	2 per faceplate

Component.....	Qty
Fabric or Acrylic Screen	1
Faceplate	2 to 3
Undersurface Brackets	2 to 3

Tools Required

Drill (Phillips #2 bit)
Level

Part # 3329590
Rev. -

Printed in U.S.A
© 2015 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent.