

# CASEGOODS

## Assembly Instructions

### Hinge Adjustment

#### Recommended Tools


- Phillips Screwdriver

**1**

#### Side Adjustment:

Turn front screw clockwise to increase door overlay, counterclockwise to decrease overlay. (Figure A).

**Figure A**

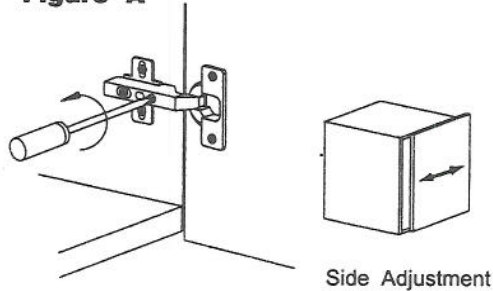


**2**

#### Depth Adjustment:

Loosen back screw. Adjust door to desired position and tighten screw. (Figure B).

**Figure B**

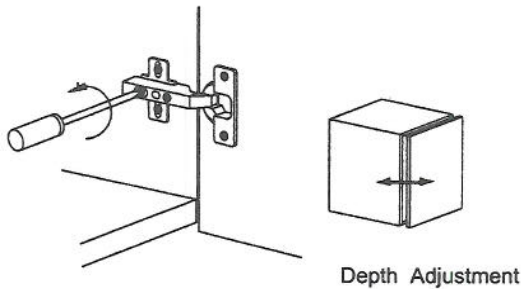


**3**

#### Height Adjustment:

Loosen screw(s) on the mounting plate. Adjust door to position and tighten screws. (Figure C).

**Figure C**

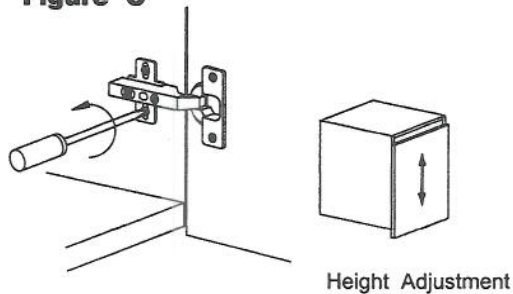


**4**

#### Door Removal and Installation:

To remove, pull release lever back (Figure D). To re-install, place the hinge on the mounting plate and push the rear of the hinge with finger pressure. The snap sound confirms a secure attachment.

**Figure D**

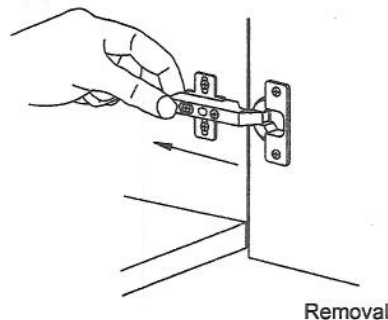

## NATIONAL

Furniture with Personality™

Telephone 800.482.1717  
Fax 812.482.8800  
www.furniture.kimball.com

Revision Level: B  
Form # AICA033B-01  
Part # 1475186

Printed in U.S.A.  
© 2001 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.