

Assembly Instruction


This Instruction shows how to assemble a configuration, the individual assembly of each unit is completed on another Assembly Instruction.

Note: This Instruction shows a Right handed unit. Determine which unit you need then Assemble accordingly.

1

Linkable Units:

Attach one side of the double sided tape to the underside of the short panel (Figure A).

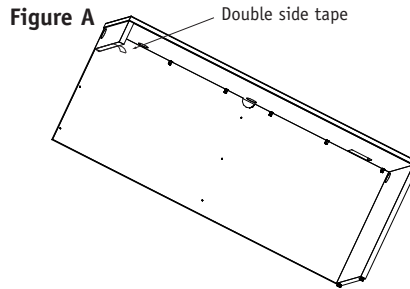


2

Note: Test fit before removing the backer from the double sided tape.

Remove the backer from the double sided tape. Align units in the user position as shown in (Figure C).

Figure C

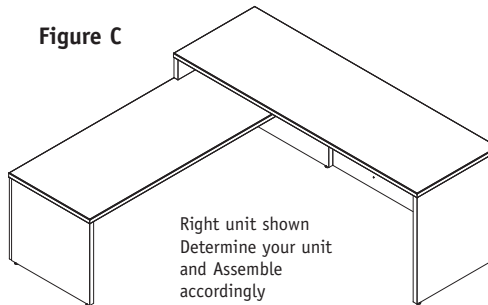


1

Box/File Height U or P-units:

Attach one side of the double sided tape to the underside of the short panels (Figure B).

Figure B

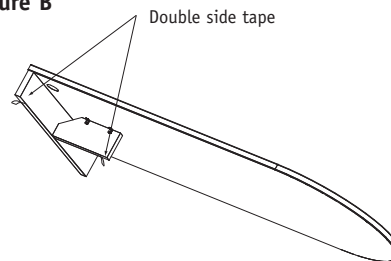


2

Note: Test fit before removing the backer from the double sided tape.

Box/File Height U or P-units:

Remove the backer from the double sided tape. Align units in the user position as shown in (Figure D).

Figure D

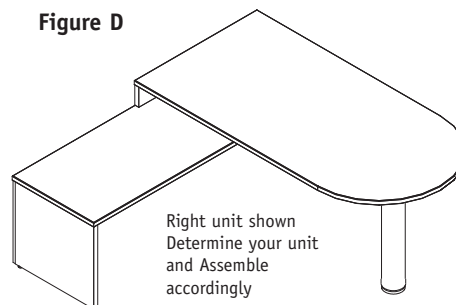

Linkable and Box/File Height U or P unit Hook up

Recommended Tools

- None

Package Contents

- Double side Tape

Qty.

Per Order

NATIONAL™

Telephone 800.482.1717
Fax 812.482.8800
www.NationalOfficeFurniture.com

Part #2258937
Rev,-

Printed in U.S.A
© 2010 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.