



Assembly Instruction

- 1** Pull off plastic covering on acrylic screen.
Bracket comes in two pieces. Assemble bracket onto screen (Figure A) with (2) #8-32 FHP x 3/8" screws per bracket.

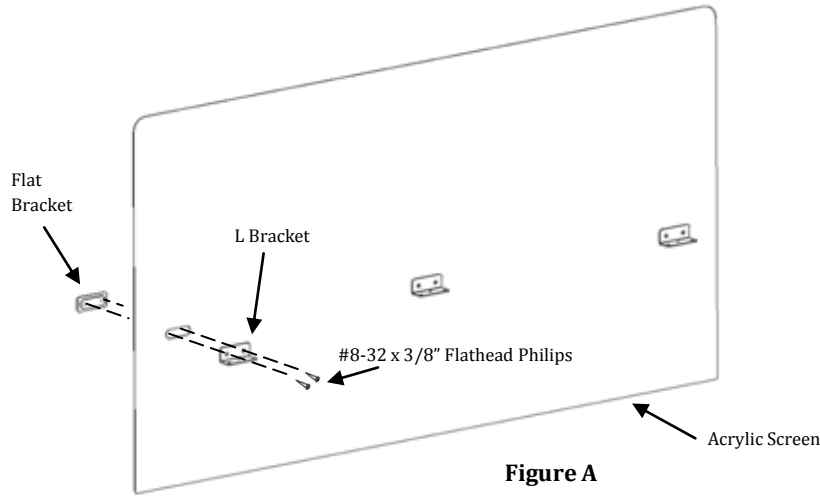

- 2** This is a two person installation. One person will center the screen assembly onto the worksurface and hold it in place. The other person will drill (3) #8 x 1" screws through each bracket into the underside of the worksurface (Figure B).

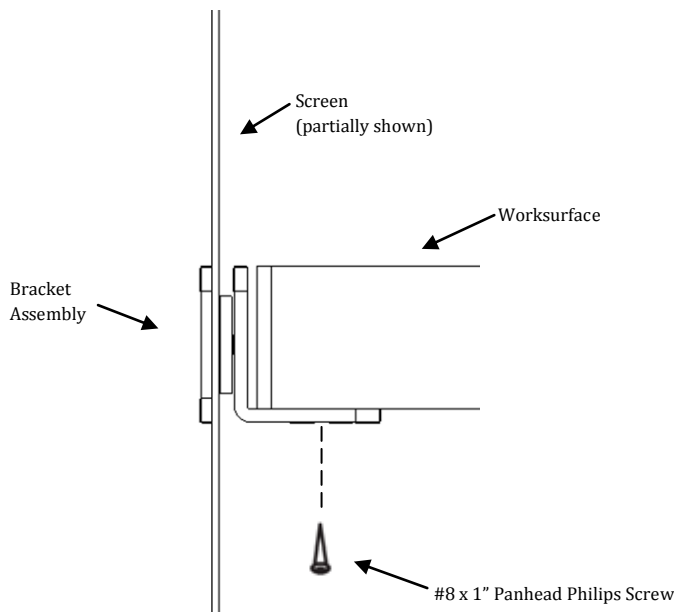

Accessory

Edgemount Privacy and Modesty Screens

Recommend Tools

- Tape Measure
- Drill

Package Contents

	Qty.
• Acrylic Screen	1
• Flat Bracket	2 or 3
• L Bracket	2 or 3
• #8-32 x 3/8" Flathead Philips	4 or 6
• #8 x 1" Panhead Philips	6 or 9

NATIONAL

Furniture with Personality™

Telephone 800.482.1717
Fax 812.482.8800
www.NationalOfficeFurniture.com

Part # 2508069
Rev. -

Printed in U.S.A.
© 2013 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.