

## Assembly Instruction

### Mio Base

### Package Contents

Hardware.....	Qty
5/16-18 x 1" panhead screw	8
5/16-18 Nut	8
5/16-18 Washer	8
5/16-18 Lock Washer	8
Glides	2

Component.....	Qty
Base (3pcs)	1

HDW for base to wall.....	Qty
5/16-18 x 1" panhead screw	8

HDW for base to surface.....	Qty
#10 x 1" panhead screw	12 to 16

HDW for surface to wall.....	Qty
#10 x 1" panhead screw	24
L bracket	6

#### Tools Required

Screw driver (Phillips #3 & #2)  
Ratchet with 1/2" Socket Head  
Level

# NATIONAL

Furniture with Personality™

Telephone 800.482.1717  
Fax 812.482.8800  
[www.NationalOfficeFurniture.com](http://www.NationalOfficeFurniture.com)

Part # 2635850  
Rev. -

Printed in U.S.A.  
© 2014 Kimball International, Inc.

**1**

Insert glides into bottom channel. Join Base Vertical with top and bottom channels using (8) 5/16"-18 x 1" bolts with lockwashers, washer, and nuts. Note that the base vertical and bottom channel have covers that have press-fit connectors. See Figure A and B.

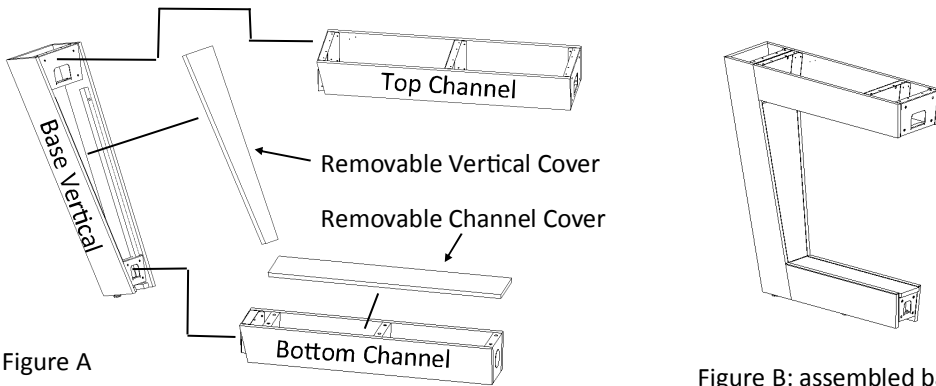


Figure A

Figure B: assembled base

**2**

The base attaches to a Mio wall that ships separately. While at least one person holds wall up, have another person attach the base to wall using (8) 5/16"-18 x 1" bolts to the top and bottom channels. See Figure C.

Note that there is a removable panel in the middle of the wall.

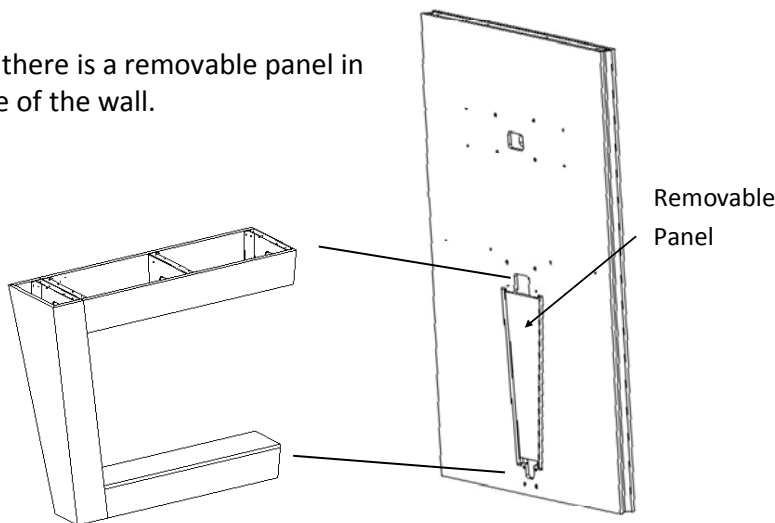


Figure C

**3**

The Mio Base has additional hardware included for

- Attaching the base to the Mio wall,
- Attaching the base to the worksurface, and
- Attaching the worksurface to the wall.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.