


1


On a smooth, clean, dry surface, place the worksurface with the userside facing down. Thread adjustable glides into bottom of base feet. Locate the base columns in position on the underside of the worksurface. Using a 9/16" socket with extender and universal knuckle joint, remove the hex head bolts from the columns. Attach the columns to the stretcher(s) with Hex Head bolts that were just removed from the columns (Figure A).

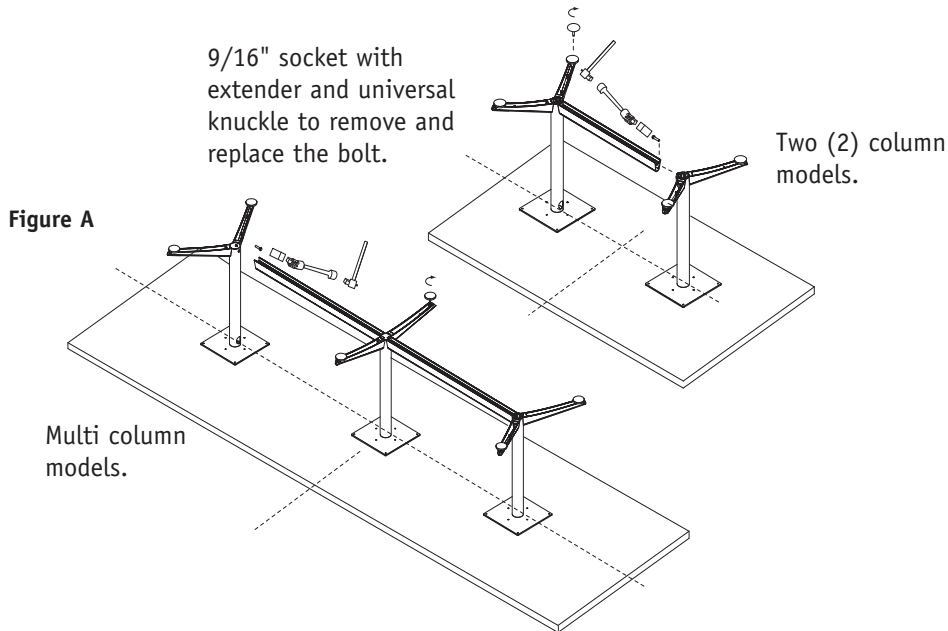

2

Center the base on the worksurface. Be careful not to bend the stretchers or columns. Attach the base mounting plates to the worksurface using #10 x 1" Pan Head Screws provided per your order (Figure B).

Using 2 or more people place the unit in the upright user position.

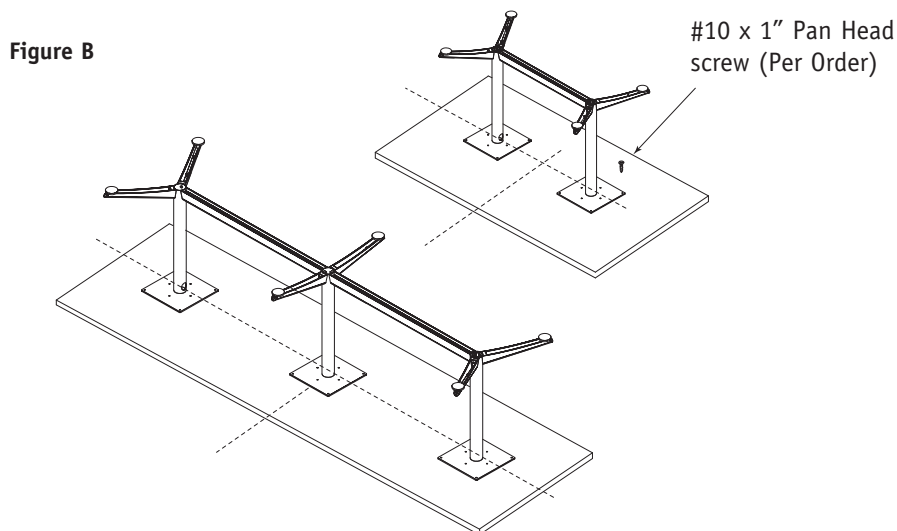

Y Base

Recommended Tools

- Power Drill
- Phillips Screw Bit
- Tape Measure
- 9/16" Socket with Extender and Universal Knuckle Joint

Package Contents	Qty.
#10 x 1" Pan Head Screw	8
Per Column	
Adjustable glides	2
Per Column	

NATIONAL | Furniture with Personality™

Telephone 800.482.1717
 Fax 812.482.8800
www.nationalofficefurniture.com

Part #2881952
 Rev,B

Printed in U.S.A
 © 2019 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.