


## Assembly Instruction

1

Figure A— Possible Components of 4-Trac

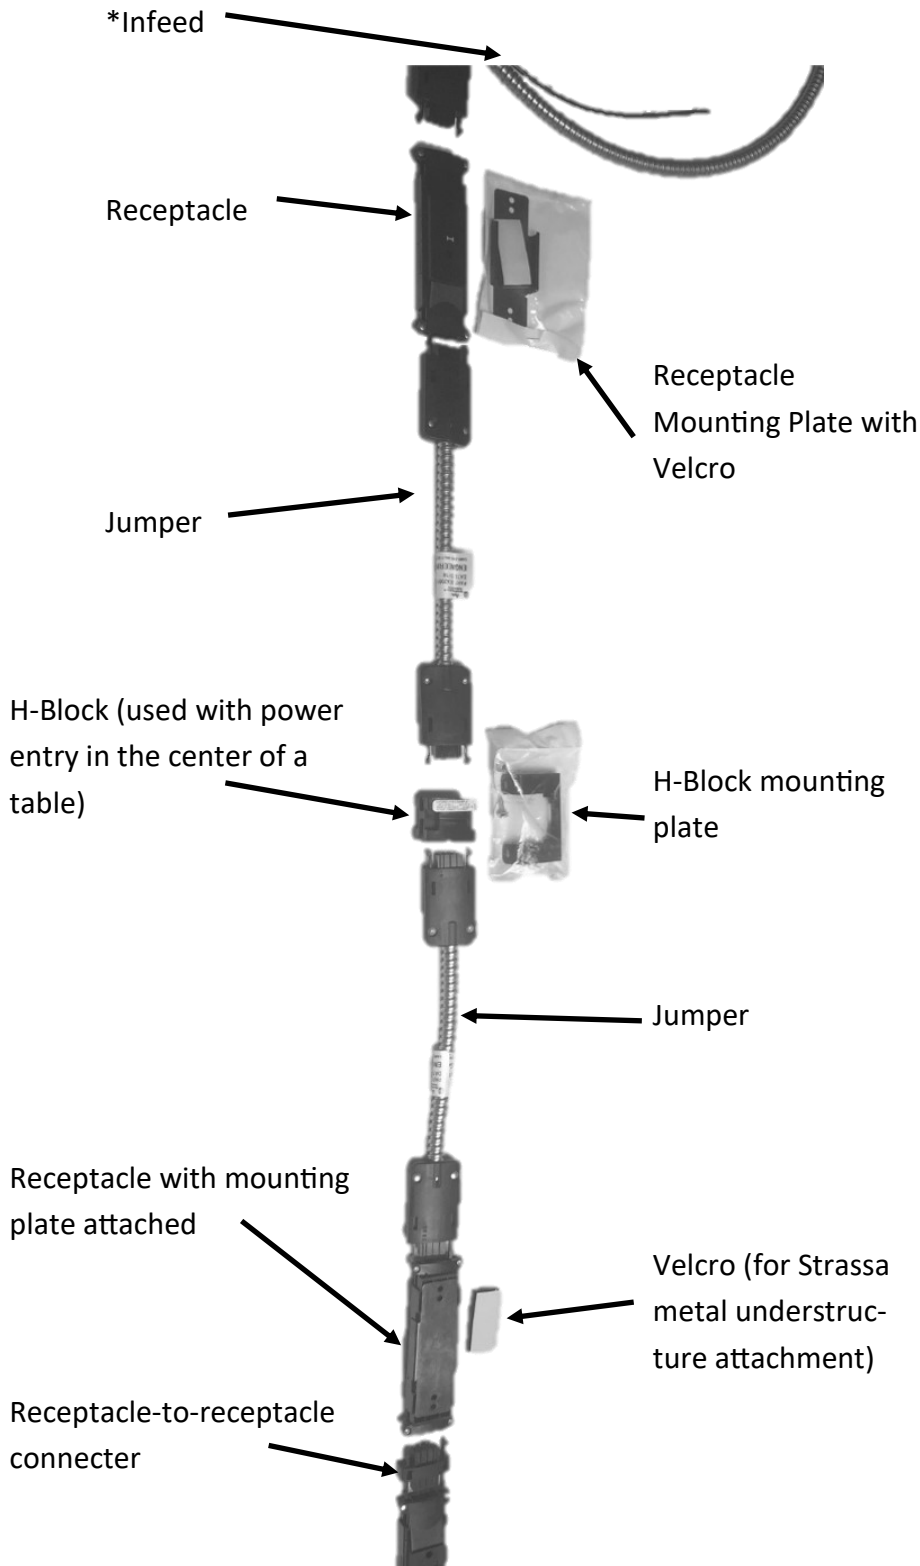

### 4-Trac Electrical

#### Package Contents

##### Tools Required

Screw Gun  
Phillips Head Bit

\*NOTE: Power infeed can be a plugged, hardwire, or NYC hardwire box.

For hardwire and NYC hardwire box, it is recommended to consult with a licensed electrician to tie into the building services.

NYC Hardwire includes a box with a knock-out for the hardwire infeed, and has a jumper wired to the box with a 4-trac connector end to tie into the receptacle (shown above). The NYC box can be attached to the underside of the worksurface using the slide mount bracket show below.



# NATIONAL

Furniture with Personality™

Telephone 800.482.1717  
Fax 812.482.8800  
[www.NationalOfficeFurniture.com](http://www.NationalOfficeFurniture.com)

Part # 3084724  
Rev. -

Printed in U.S.A  
© 2015 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.

# Assembly Instruction

## 4-Trac Electrical

**2**

The jumper, H-Block, and receptacle-to-receptacle connector are all “handed” units, so confirm that the “fin” on the connecting pin lines up with the slot in the receptacle.

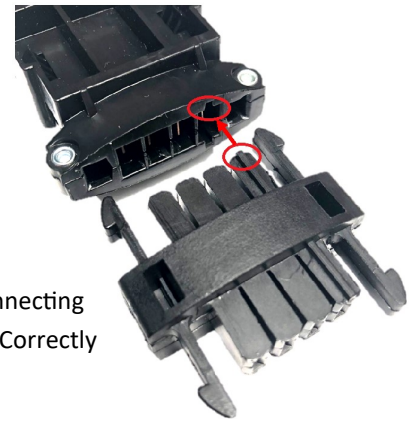


Figure B– Connecting Components Correctly



**3**

If the outlet is located towards the center of the table then an H-Block will be used between jumpers at that location to allow the power entry to be ran down the center column. Depending on the mounting application it can either be attached with the mounting plate to the underside of a worksurface or attached with Velcro on a metal undersurface ‘C-Channel’ . Receptacles will also be attached with either a mounting bracket to the worksurface or Velcro to the metal ‘C-Channel’.

Mounting Bracket



Jumper

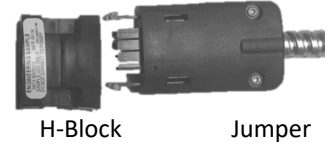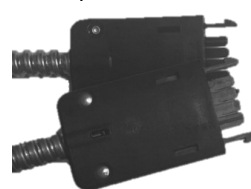

H-Block

Jumper

Power Entry Feed

Figure C– H-Block Setup

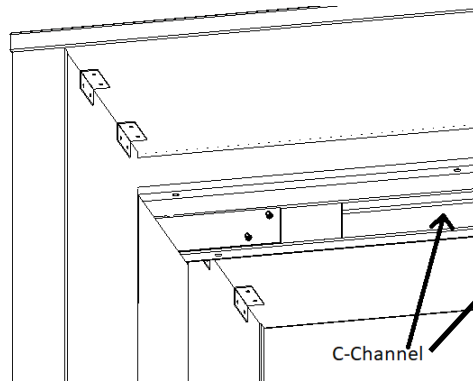


Figure D– ‘C’ Channel Illustration



Example of a mounting bracket for a receptacle: mounting bracket attaches to worksurface first and then the receptacle snaps into the bracket

Example of Velcro on a receptacle

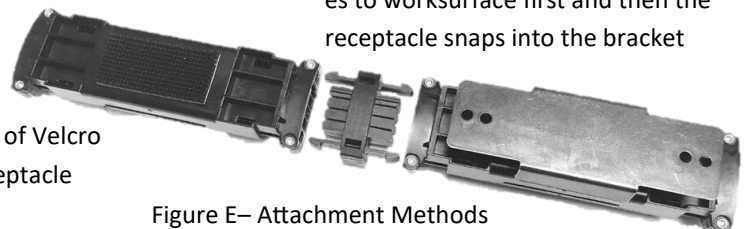


Figure E– Attachment Methods

**NATIONAL**  
Furniture with Personality™

Telephone 800.482.1717  
Fax 812.482.8800  
[www.NationalOfficeFurniture.com](http://www.NationalOfficeFurniture.com)

Part # 3084724  
Rev, -

Printed in U.S.A  
© 2015 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.

## Assembly Instruction

### 4-Trac Electrical

**4**

The receptacles are recommended to be mounted at the locations based on the image and table below for the size of table that it is being installed on.

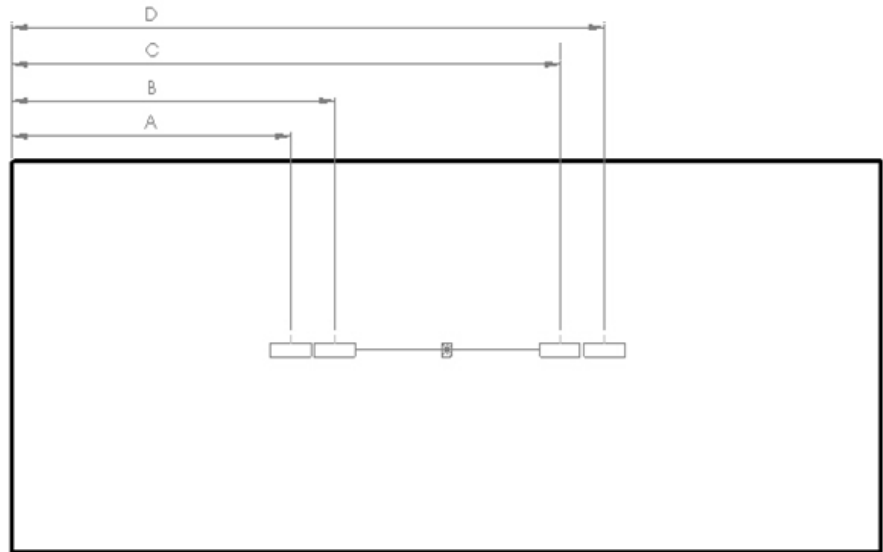


Table Length	A duplex	B duplex	C duplex	D duplex
48"	n/a	16 3/16	31 13/16	n/a
60"	n/a	22 3/16	37 13/16	n/a
72"	n/a	24 3/16	47 13/16	n/a
84"	n/a	30 1/8	53 13/16	n/a
96"	30 1/16	36 1/8	59 3/4	n/a
108"	36 1/16	42 1/8	65 3/4	n/a
120"	38 5/16	44 3/8	75 7/16	n/a
144"	38 5/16	44 3/8	99 7/16	105 1/2
168"	44 1/4	50 5/16	117 3/8	123 7/16
192"	50 1/4	56 5/16	135 3/8	141 7/16
216"	50 3/16	56 1/4	159 5/16	165 3/8
240"	14 5/8	68 1/4	171 5/16	224 15/16
Dimensions are in inches				

Table 1– Mounting Locations of Receptacles for Table Sizes

**NATIONAL**

Furniture with Personality®

Telephone 800.482.1717  
 Fax 812.482.8800  
[www.NationalOfficeFurniture.com](http://www.NationalOfficeFurniture.com)

Part # 3084724  
 Rev, -

Printed in U.S.A  
 © 2015 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.