


Whirl™ Assembly Instruction

- 1 Remove screws & plastic bracket before installing the headrest onto the chair as shown in Figure A.

Figure A

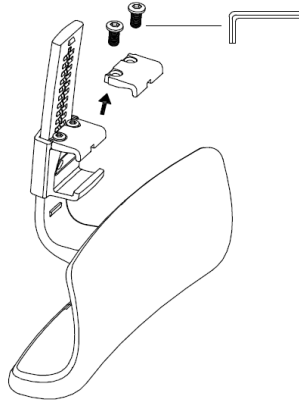

- 2 Line up the headrest notch with the positioning rib. Secure the headrest onto the backrest with plastic bracket & two 1/4-20 x 9/16 screws as shown in Figures B & C.

Figure B

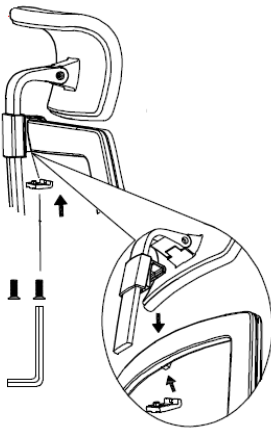


Figure C



Product Line

Whirl™ Headrest

Required Tools

- 5mm Hex Key Wrench (Included)

Package Contents

	Qty.
• Plastic bracket	1
• Hardware Kit: <ul style="list-style-type: none">• 1/4-20 X 9/16" hex head bolts	2
• Headrest Assembly	1



Assemble units as described herein only. All screws and bolts must be tightened securely and checked periodically after assembly. Failure to assemble or to secure parts properly may result in assembly failure and personal injury.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.

NATIONAL

Telephone 800.482.1717
Fax 812.482.8800
www.NationalOfficeFurniture.com

Part# 3215512

Rev. A

Printed in U.S.A.
©2020 KimballInternationalInc.