

Assembly Instruction

1

Unpack screens and bracket and place screens clean floor space in desired orientation. Attach ganging plate using hardware from Screens as shown in Figure A. Attach any remaining feet and place screens upright and move to desired location, See Figure B.

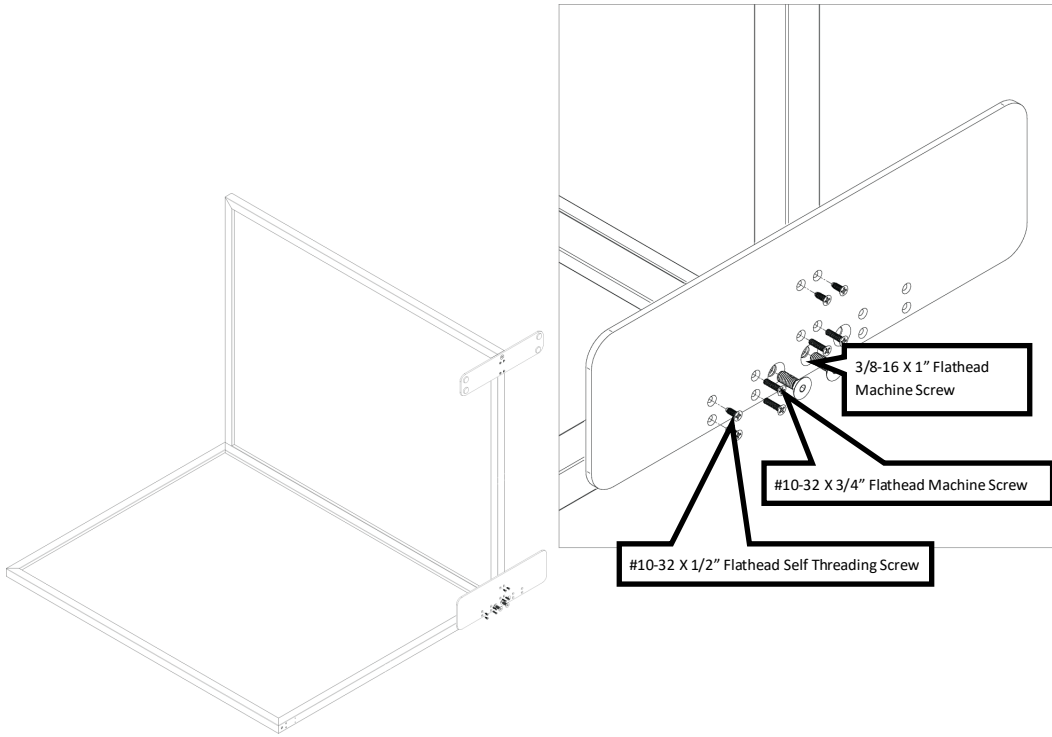


Figure A

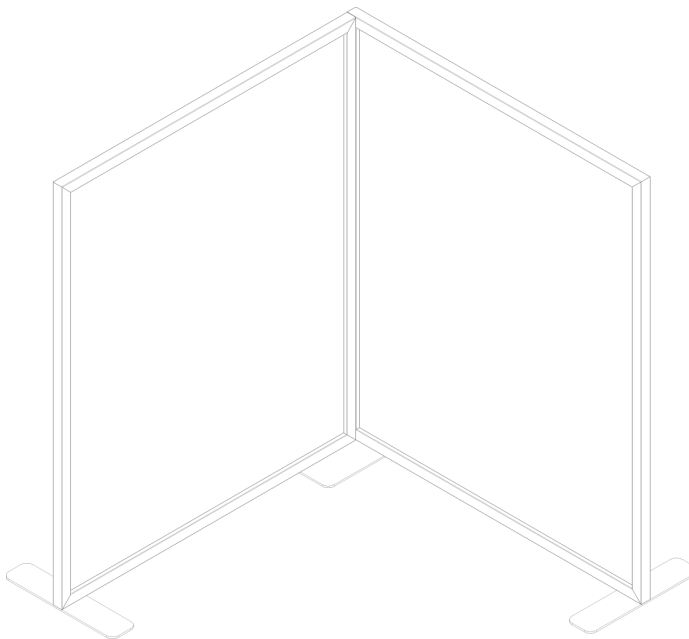


Figure B

Accessory
Floor Screen
Ganging Bracket

Package Contents

Hardware	Qty
See Screen	
Component	Qty
Plate	1

Tools Required

Drill (Phillips #2, 7/32" Hex bit)

Part # 3329705
Rev, -

Printed in U.S.A
© 2015 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent.