

Assembly Instruction

- 1** Unpack the screen.
- 2** Determine the bracket locations. The brackets should be 2" inset from the edge of the resin screen location. See Figure A to determine the correct spacer to use based on the thickness of the panel you are mounting on. Secure the mount on the panel and using a hand clamp tighten the clamp around panel then a #2 Phillips to secure the bracket on to the panel. See Figure B.
- 3** Install the clear rubber pads inside the clamp mount. Locate then secure resin screen using the hex screw on the side of the clamp. Hold the resin screen up slightly to prevent the bottom of the clamp from pitching the resin before the pads.

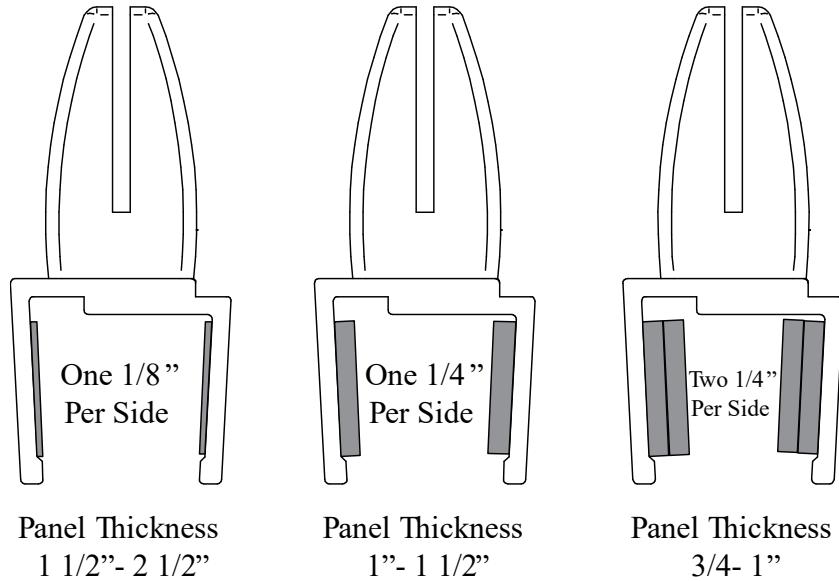


Figure B: Determine Bracket Location.

Accessory Universal Mount

Package Contents

Hardware	Qty
Spacer	Varies
Component	Qty
Screen	1

Tools Required

- Hand Clamp
- #2 Phillip Drive
- 5mm Hex Drive

Part # 3344233
Rev, A

Printed in U.S.A
© 2015 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent.