

**Note:** These instructions explain basic installation of the worksurfaces. For Safety purposes, it is recommended that more than one (1) person be used to complete this Assembly Instruction.

Unpack the worksurface, place it face down on a smooth, hard surface. Take care to not damage the finished side of the worksurface.


## 1

### Contemporary Units

Attach the flat brackets provided with four (4) #10 x 1" Panhead screws per bracket along the worksurfaces joint equally spaced. Align the edges of the two (2) worksurfaces, while pulling the joint tight install the screws into the other worksurface (Figure A).

Attach Bases per Base Assembly Instruction sheet.

Figure A

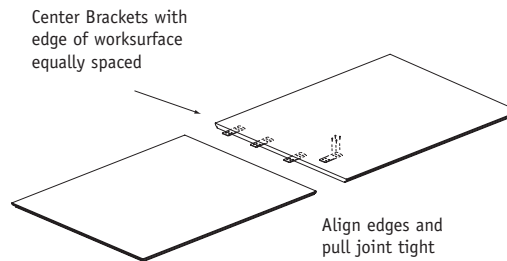


## 2

### Undersurface Wire Manager

If a Undersurface Wire Manager is used, determine the center point between grommets using a tape measure, mark the placement location with a pencil. Center the Undersurface Wire Manager over the mark with the grips properly oriented. Attach to the underside of the worksurface with the provided screws (Figure B).

**NOTE:** If power Grommets are used install according to their Assembly Instructions, ensure metal grommet does not damage worksurface and is securely fastened with the provided hardware.

Figure B

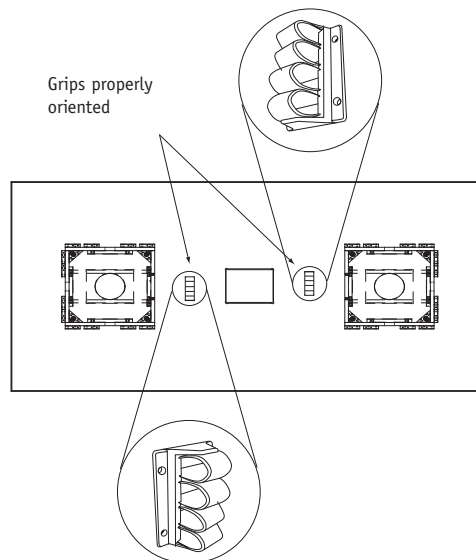

## Conference and Training Solutions Top Assemblies

### Recommended Tools

- Adjustable Wrench
- Tape Measure or Ruler
- Phillips screwdriver
- Pencil

Package Contents	Qty.
------------------	------

### Contemporary

- |                           |           |
|---------------------------|-----------|
| • #10 x 1" Panhead Screws | Per Order |
| • Flat Mounting Bracket   | Per Order |

NATIONAL | Furniture with Personality™

Telephone 800.482.1717  
 Fax 812.482.8800  
[www.nationalofficefurniture.com](http://www.nationalofficefurniture.com)

Part #2106945  
 Rev,-

Printed in U.S.A  
 © 2009 Kimball International, Inc.