


**1**

Align bookcase units. Measure and place masking tape over the position of the boring for the connector bolts. With a Number 2 pencil, mark a line on the masking tape matching the measurements in Figure A.

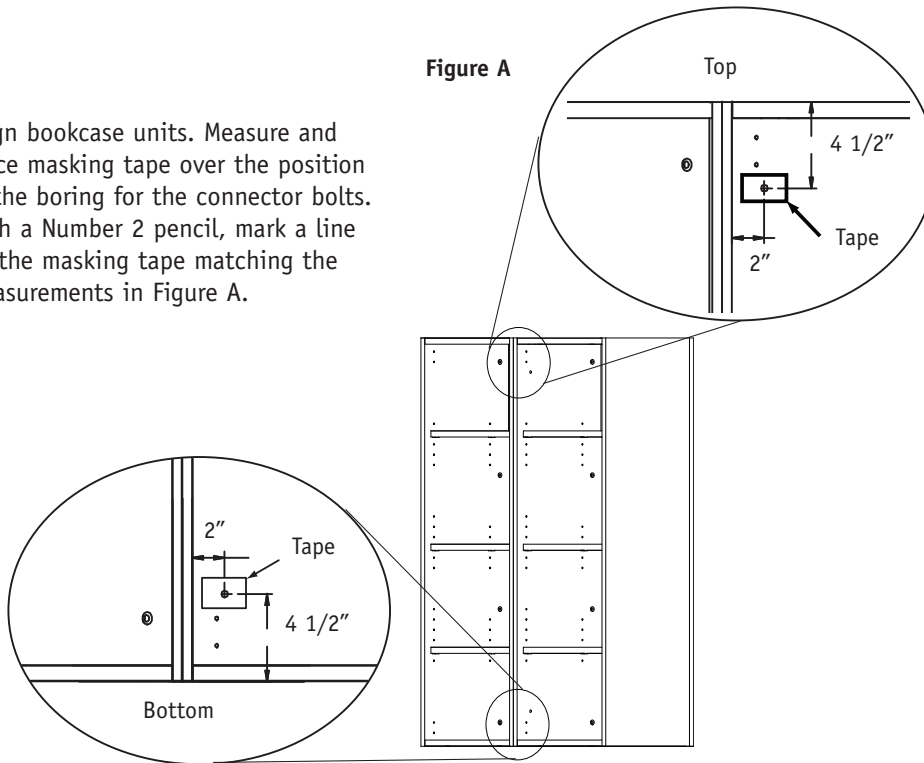


**2**

Use a power drill with a 10mm drill bit to bore through the end panels of the bookcases (Figure B).

**Note:** It is recommended that a scrap block of wood be used to support where the drill bit will bore through the end panel.


**Figure B**

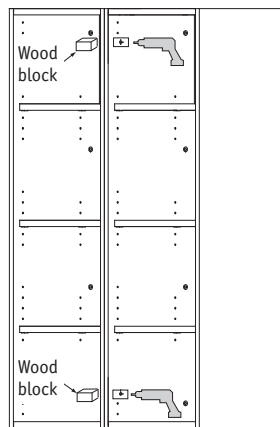

**3**

Align connecting holes in bookcases. Attach together using two (2) connecting bolts. Insert half of a connector bolt into one connecting hole, insert the other half into the opposite connecting hole. Tighten all bolts securely, making sure the bookcase halves are flush against each other with no gaps (Figure C).

**Figure C**

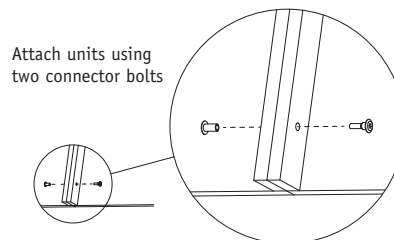

## Casbah™ Casegoods Set on Bookcase Connection

### Recommended Tools

- Allen Wrench
- Tape Measure
- No.#2 Lead Pencil
- Power Drill
- 10mm Drill Bit
- Masking Tape

### Package Contents

- Connecting Bolts

### Qty

2

# NATIONAL

Furniture with Personality®

Telephone 800.482.1717  
 Fax 812.482.8800  
 www.nationalonline.com

Part #2071190

Printed in U.S.A  
 © 2007 Kimball International, Inc.