

## Assembly Instruction

### Alloy Wire Manager

#### Package Contents


Hardware	Qty
#10 x 1 1/4" Wood Screws	4

**Tools Required**  
Screw Driver  
#2 Phillips Bit

**1**

Assemble all components as shown in **Figure A**.


Figure A:

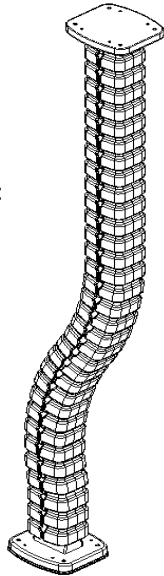

**2**

With the weighted end to the ground. Locate on the underside of the worksurface where the wire manager is to be placed. Using the four provided screws attach the wire manager as shown in **Figure B**.

Figure B:

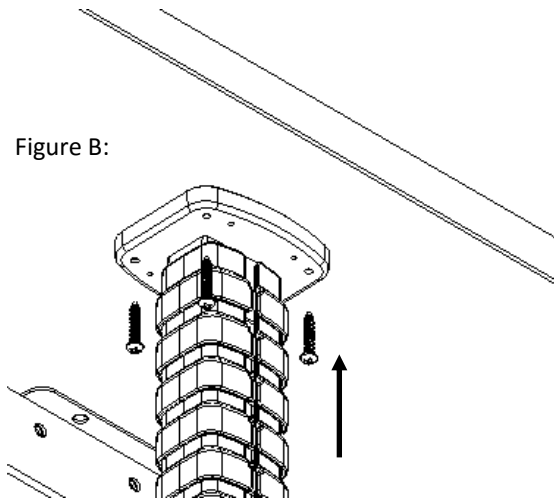

**3**

Run all desired cables through the wire manager.

# NATIONAL

Furniture with Personality™

Telephone 800.482.1717  
Fax 812.482.8800  
[www.NationalOfficeFurniture.com](http://www.NationalOfficeFurniture.com)

Part # 2893451  
Rev. -

Printed in U.S.A  
© 2014 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.