


## ASSEMBLY INSTRUCTIONS

It is Recommended that Three (3) people be used to assemble.

**1**

Lay glass worksurface top side down on a smooth, clean surface. Insert with Allen Wrench four (4) 5/16" x 1" set screws into the threads of the metal stanchions in the glass worksurface (Figure A).


Figure A

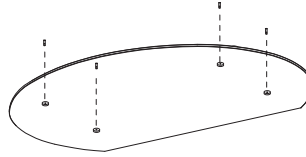

**2**

Remove drawers as needed from Pedestals. Place Pedestals the approximate distance, that the 4 set screws of the Glass Worksurface would align with the holes on the top of the Pedestal.


Figure B

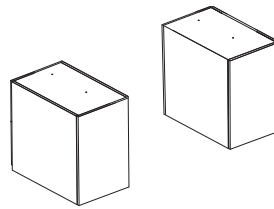

**3**

Lift and flip over the glass worksurface with the set screws facing down. Insert the set screws into the holes in the pedestals. Set with the flat facing the user side of the pedestals.

Figure C

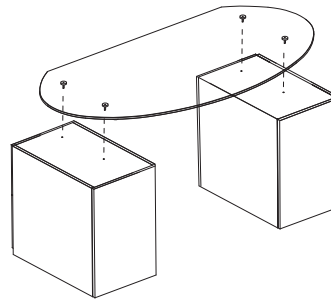


**3**

Screw the cap nuts on to the threads of each set screw and tighten (Figure D).

Figure D

Install drawers into pedestals as needed.

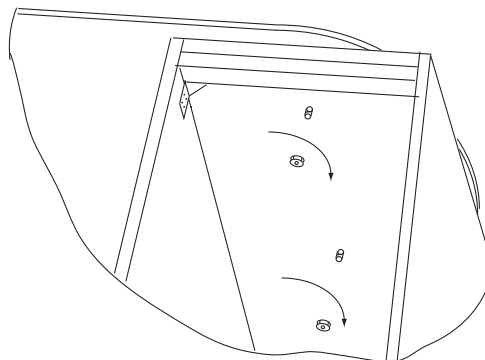

### WaveWorks® Glass Top Desk

#### Recommended Tools

- Allen Wrench

#### Package

#### Contents

- Set Screws
- Cap Nut

#### Qty

4  
4

# NATIONAL

Furniture with Personality®

Telephone 800.482.1717

Fax 812.482.8800

www.nationalonline.com

Part # 2048355

Printed in U.S.A

© 2008 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.