



Confide Table Ganging


- 1** Determine which side of existing chair for add-on table. Remove the inserted caps from the under-seat beam on the determined side of existing chair.
NOTE: Under-seat beam caps are located on the bottom side of the chair as shown in Figure A. **NOTE:** If installation is a center or corner table, repeat cap removal of add-on side of both existing chair models.

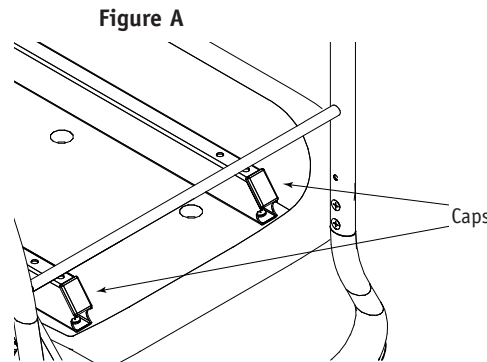


- 2** Place the connection bars into the exposed beam ends of the add-on table, aligning mounting holes. Attach with two (2) 1/4"-20 x 3/4" truss head screws and flat washers per connection bar (Figure B).
NOTE: If installation is a center or corner table, repeat the process on the other side.

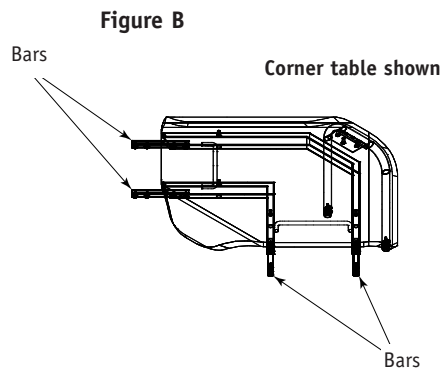

- 3** Place the connection bars of the table into the open exposed beam ends of the existing chair, aligning mounting holes (Figure C). **NOTE:** If installing a center or corner table, repeat the process on the other side.

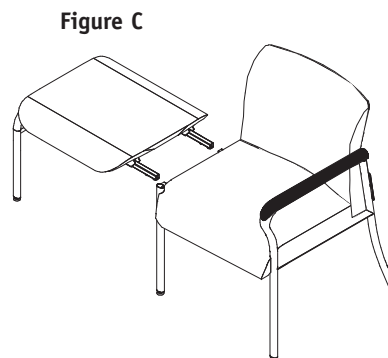

- 4** Attach connection bars with two (2) 1/4"-20 x 3/4" truss head screws and flat washers per each connection bar. **NOTE:** Figure D shows the bottom side of the units.

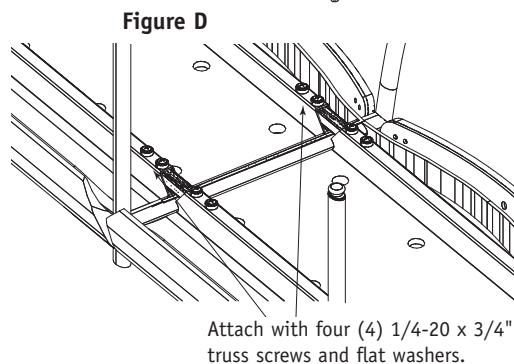

Recommended Tools

- Phillips head screwdriver

Package Contents

- | | Qty. |
|------------------------------------|-------------------|
| • #1/4"-20 x 3/4" Truss Head Screw | 4 per bar |
| • #1/4" Flat Washer | 4 per bar |
| • Connection Bar | 2 per add-on side |

NATIONAL

Furniture with Personality®

Telephone 800.482.1717
 Fax 812.482.8800
 www.NationalOfficeFurniture.com

Part #2417018
 Rev,-

Printed in U.S.A
 © 2012 Kimball International, Inc.